WingSpan Wall Stand Off Instructions





1. Place arm into the rung bracket while pushing in on the locking pin. Slide arm into bracket until the locking pin engages in to the hole.



2. Repeat the first instructions for the second arm.




3. Place the WingSpan on the top rung of the ladder when the ladder is in extension position only. Make sure the WingSpan is centered securely on the top



4. Swing the clamp into the front slot of the bracket so that the clamp is facing downwards. An adjustment of the clamp maybe necessary to insert clamp into the front slot.



5. This is how the WingSpan should look after you have assembled it.

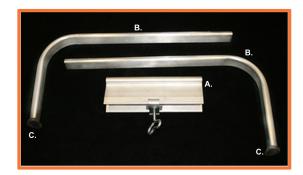

	i ait NO.
A. Rung Bracket	53196
B. Arm Assembly Including Feet(2)	21093
C. Rubber Foot (2)	51243



Part No